



AUTENTIC

SETUP INSTRUCTIONS

EARTH ANCHORS

PACKING LIST


(A) Earth Anchor



(B) Driving Rod (installation tool)






(A)

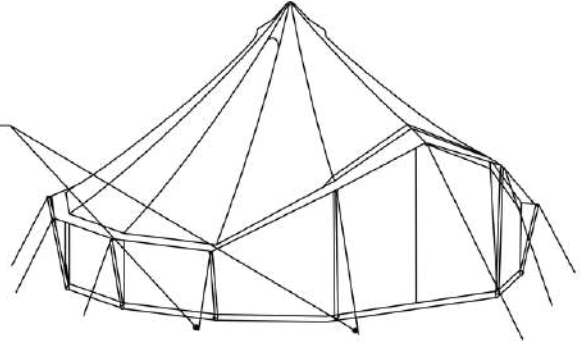


PLEASE READ THIS CAREFULLY

1

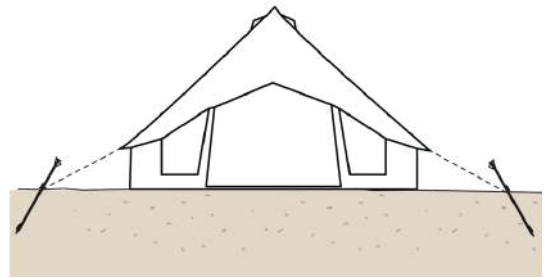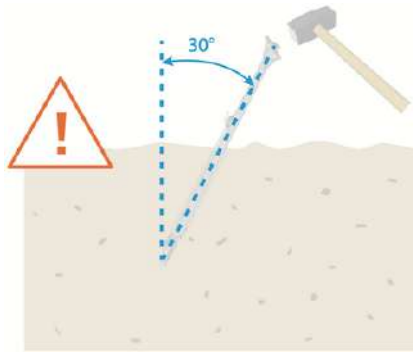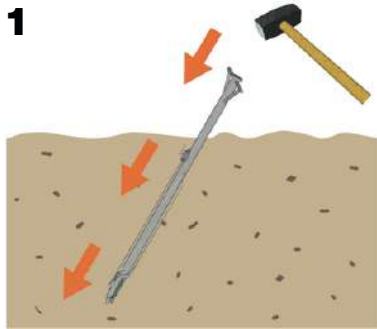


Place the driving rod (B) in the earth anchor (A) and peg the earth anchor into the ground. Follow the positioning and angles as shown in the illustrations.

2

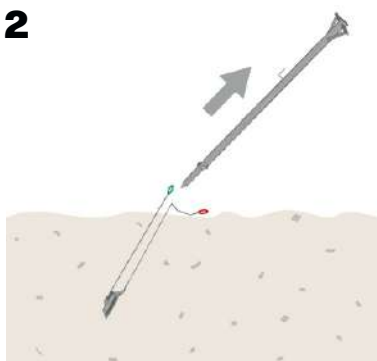


Pull the driving rod (B) out of the ground. The earth anchor (A) should stay in place.


3

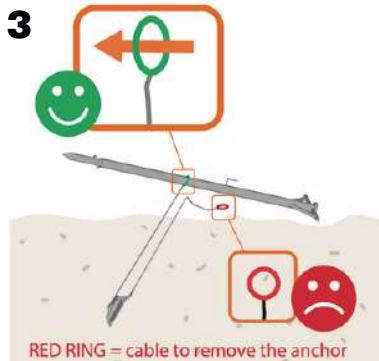

Pull the wire with green ring using the driving rod (B) so the earth anchor (A) will tilt itself in the correct position.

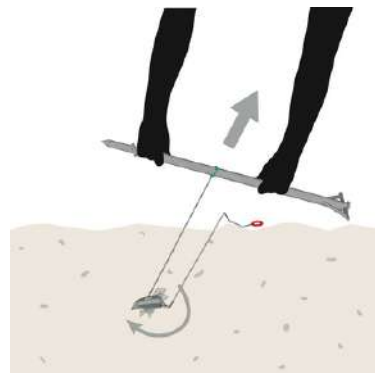


4

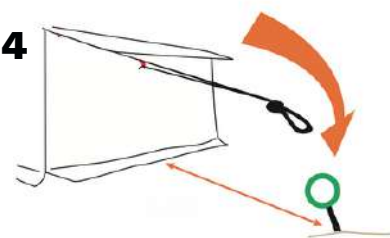


Secure the guyline onto the wire with the green ring, follow the correct distances.

5

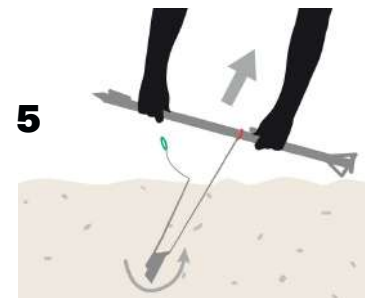

Pull the wire with the red ring to remove the earth anchor.

! Make sure to follow all the other set-up guidelines from the tent set-up instructions.

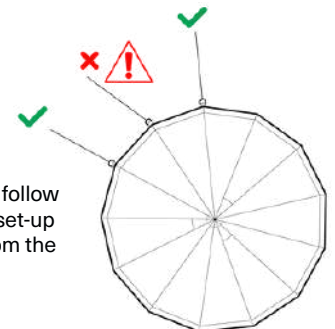

Always read the latest version of the manual with this QR code



Make sure to read the additional tips for maintenance and usage on autentic.world

