

# CLEANING



AUTENTIC

## CLEANING

To extend the lifespan of your bell tent, regular cleaning is crucial. Avoid delaying the cleaning when dirt appears, as it has a tendency to adhere to existing dirt and retain moisture, possibly causing mold growth. This is especially important for cotton-based tent fabrics. After cleaning, retreat the fabric with a waterproofing product. For the best result, we recommend cleaning and re-treating the tent while it is still pitched.

Autentic has conducted extensive testing on various cleaning and waterproofing products. Depending on the specific fabric of your tent, we recommend using the mentioned products for both cleaning and waterproofing purposes:

- [1. Cleaning products for Wottex™ Pro](#)
- [2. Cleaning products for Wottex™ and Wottex™ FR](#)
- [3. Cleaning products for 100% cotton tents](#)

It is imperative to ensure that your bell tent is thoroughly dried after cleaning and re-treating it to prevent the growth of mold.



## CLEANING PRODUCTS FOR WOTTEX™ PRO

The Autentic Wottex™ Pro bell tents feature a fabric made of Acrylic material. To keep your Wottex™ Pro bell tent in optimal condition, we suggest using two Tex' Aktiv products. First, utilize **Tex Aktiv Cleaning** to remove stains from the tent fabric. Second, apply **Tex Aktiv Guard**, which will renew the fabric's water-repelling properties.

1



### TEX' AKTIV CLEAN

1. Spray the product on a hidden spot on your tent to test the product.
2. Once tested, apply the product to the stained area and leave it there for 5 minutes. For old and stubborn stains, gently rub in two directions with a damp sponge to allow the foam to penetrate the fabric between the fibers.
3. Rinse the stain thoroughly with water and repeat the procedure if needed.
4. Ensure everything is thoroughly dried before re-treating the stain with Tex' Aktiv Guard.

Tip: For higher-located stains on the tent, you can use a soft telescopic brush that can be connected to a garden hose simultaneously.

2



### TEX' AKTIV GUARD

1. After using Tex' Aktiv Clean, ensure the fabric is clean and dry before applying Tex' Aktiv Guard.
2. Spray the product evenly on the fabric from a distance of about 15 cm, first horizontally and then vertically.
3. Allow the product to dry naturally for at least 3 hours before storing your tent.
4. Repeat the process if required.

Please note that the product's full effectiveness may take a few days to activate. Repeat the process if required.

## BUY TEX' AKTIV PRODUCTS VIA AUTENTIC

You can acquire both Tex' Aktiv Clean and Tex' Aktiv Guard directly through Autentic. For further details, feel free to contact our team at [info@autentic.world](mailto:info@autentic.world).

**AUTENTIC**

Find more tips on  
[autentic.world](https://www.autentic.world)



## CLEANING PRODUCTS FOR WOTTEX™ AND WOTTEX™ FR

Both Wottex™ and Wottex™ FR are polycotton fabrics. To properly maintain and retreat your cotton-based bell tent (Wottex™ and Wottex™ FR), we recommend employing a combination of two 303 products. First, clean the tent fabric using the **303 Multisurface Cleaning** solution. Then, enhance its water repellency by applying the **303 Fabric Guard** product.

1



### 303 MULTISURFACE CLEANER

1. Spray the product on a hidden spot on your tent to test the product.
2. Once tested, apply the product to the stained area until it's thoroughly wet.
3. Gently rub it with a medium-soft brush or a damp cloth.
4. Wipe away the stain and any leftover product using a damp cloth, rinsing with clean water if needed. Repeat the procedure if necessary.
5. Ensure everything is thoroughly dried before re-treating the stain.

Tip: For higher-located stains on the tent, you can use a soft telescopic brush that can be connected to a garden hose simultaneously.

2



### 303 FABRIC GUARD

1. After using 303 Multisurface Cleaner, ensure the fabric is clean and dry before applying 303 Fabric Guard.
2. Spray the product on a hidden spot on your tent to test the product and then wipe it with a cloth.
3. Spray the product on the cleaned surface until the fabric becomes evenly wet.
4. Allow the tent to thoroughly dry before using it. The drying time typically ranges from 12 to 24 hours.
5. Repeat the process if required.

## BUY 303 PRODUCTS

Autentic does not distribute the 303 products, but these items are available for purchase through a variety of online retailers.



## CLEANING PRODUCTS FOR 100% COTTON TENTS

For the maintenance and retreatment of your 100% cotton bell tent, follow this two-step approach. Firstly, use the **303 Multisurface Cleaner** to effectively remove stains from the tent material. Secondly, apply **Ultramar**, a transparent treatment product designed to restore water-repellency.

1



### 303 MULTISURFACE CLEANER

1. Spray the product on a hidden spot on your tent to test the product.
2. Once tested, apply the product to the stained area until it's thoroughly wet.
3. Gently rub it with a medium-soft brush or a damp cloth.
4. Wipe away the stain and any leftover product using a damp cloth, rinsing with clean water if needed. Repeat the procedure if necessary.
5. Ensure everything is thoroughly dried before re-treating the stain.

Tip: For higher-located stains on the tent, you can use a soft telescopic brush that can be connected to a garden hose simultaneously.

2



### ULTRAMAR

1. After using 303 Multisurface Cleaner, ensure the fabric is clean and dry before applying the Ultramar product.
2. Apply generously the Ultramar product and make sure to evenly distribute it over the surface. Use a plant sprayer, brush, or roller.
3. Apply the product to the interior side of the tent fabric as well.
4. Allow the product to dry naturally before storing your tent.
5. Repeat the process if required.

## BUY 303 MULTISURFACE & ULTRAMAR PRODUCTS

Autentic does not distribute these products, but these items are available for purchase through a variety of online retailers.



## **RESTRICTIONS**

We strongly advise against using a high-pressure cleaner, any other product than the ones stated above, or aggressive detergents as they can damage the tent's fabric and shorten its lifespan. Autentic can not be held responsible for damages and unsatisfying results caused by cleaning or re-treating your glamping tent with other products or in a different way than the ones advised by us.

## **STORAGE**

Before storing your bell tent, it is essential to ensure that the tent and all tent parts are thoroughly dried to prevent the growth of mold and mildew. These unwanted intruders thrive in damp environments and can cause damage to the tent fabric. Take the time to dry your tent, paying extra attention to the seams and corners where moisture tends to linger. Once fully dry, store your bell tent in a cool, dry, and well-ventilated place, away from direct sunlight and extreme temperatures, to maintain its longevity.

Do you have questions or inquiries? Reach out to our team via [info@autentic.world](mailto:info@autentic.world).

