



AUTENTIC

SETUP INSTRUCTIONS

JACK BELL TENSION SET

PACKING LIST

1x Tension Pole



1x Tension Pole Insert



1x Centre Pole Clamp




1x Spacer



1x A-frame Cover




1x Flap Key

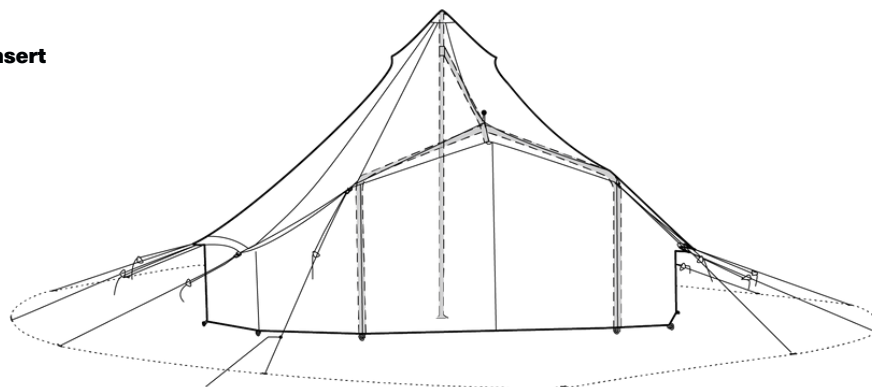

PLEASE READ THIS CAREFULLY


1

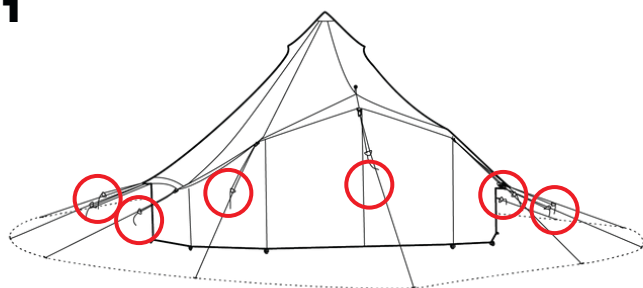

Begin with a pitched tent.

Guylines: Loosen all guylines.


2

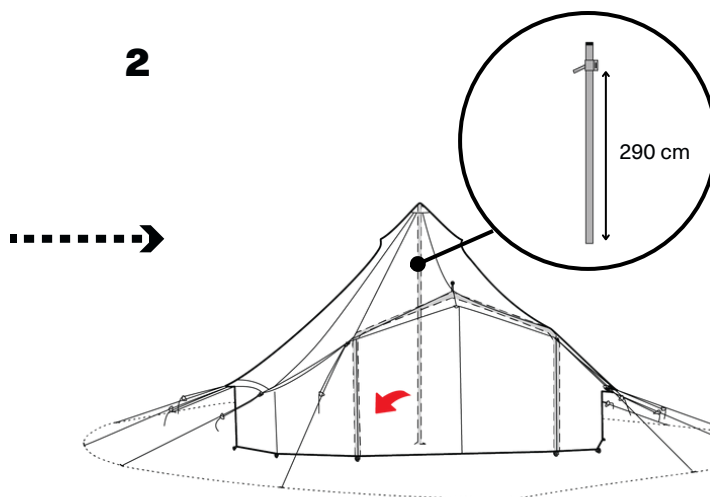

Centre Pole: Un-pitch the centre pole and slide the clamp over the centre pole. Remove the top cap if it is blocking and re-add it after. Use the spacer to match the centre pole diameter.


Fix the clamp at 290cm from the ground. Tighten the clamp well using a hex key. Make sure the clamp is pointing down.

3

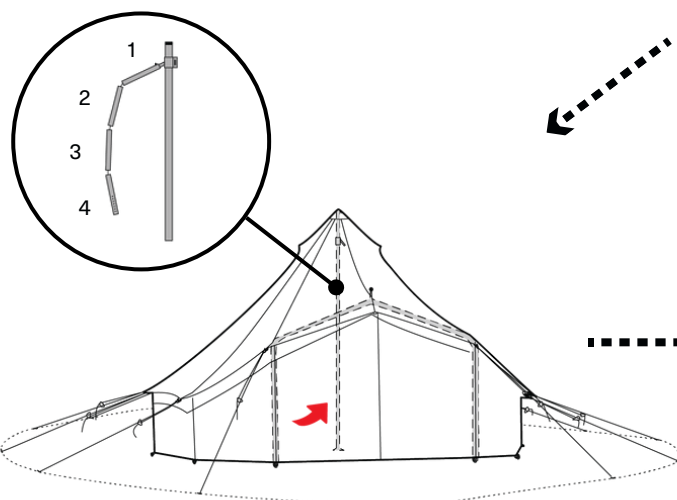

Centre Pole: Re-pitch the centre pole and attach the first section of the tension pole.

4

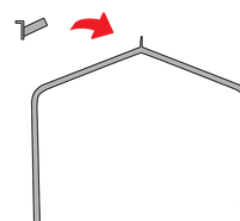

A-Frame: Add the A-frame cover and push the pin through the eyelet.

Always read the latest version of the manual with this QR code



Make sure to read the additional tips for maintenance and usage on autentic.world







AUTENTIC

SETUP INSTRUCTIONS


JACK BELL TENSION SET

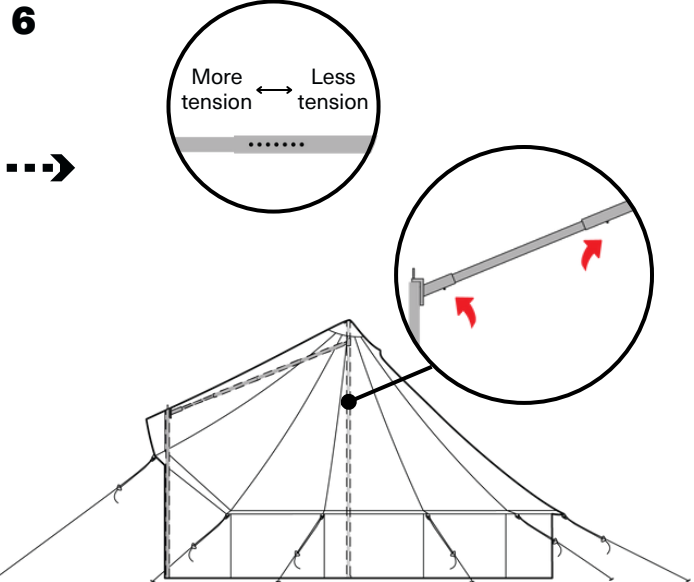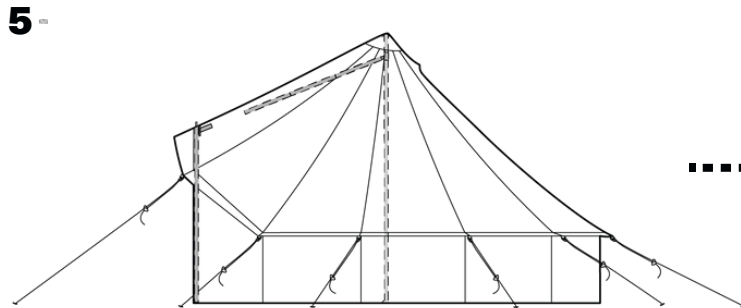


Tension Pole: Straighten the tension pole. Make sure the pins are properly in place.

Tension Pole: Add the tension pole insert. Extend the entire structure until the tent roof is well tensioned.

Tip: Use the front centre guyline to help pull the roof forward when extending the interior structure.

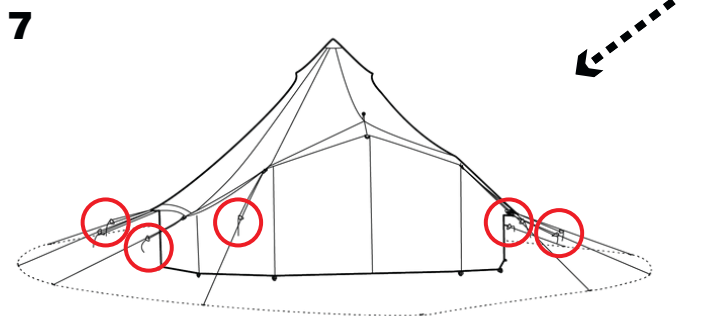

Guylines: Remove the centre guyline and re-tension the other guylines.

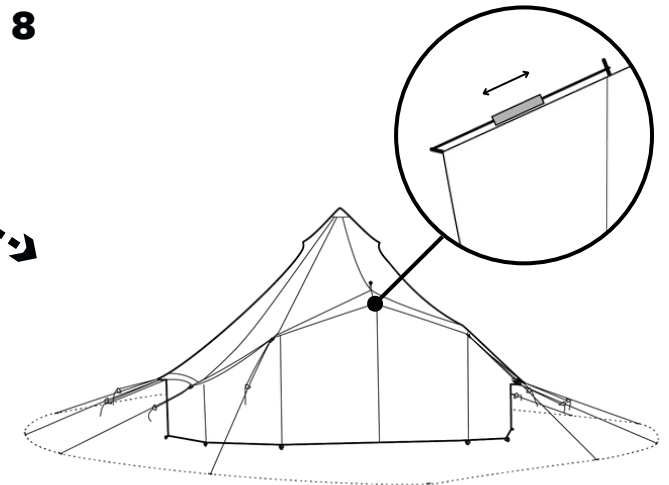

Flap Key: Add the flap key to the A-frame pin and the D-ring webbing. Extend the flap key until the tent eave is tensioned well.



IF THERE ARE STRONG WINDS RE-ATTACH THE CENTRE GUYLINE.

Always read the latest version of the manual with this QR code



Make sure to read the additional tips for maintenance and usage on autentic.world

