




Instructions shock absorbers

Packing list




5x Shock absorber
/ packing




Guylines sets

Positioning shock absorbers

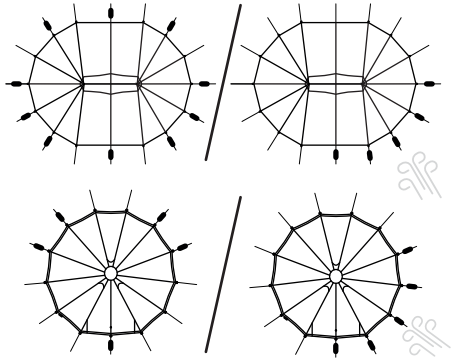


1

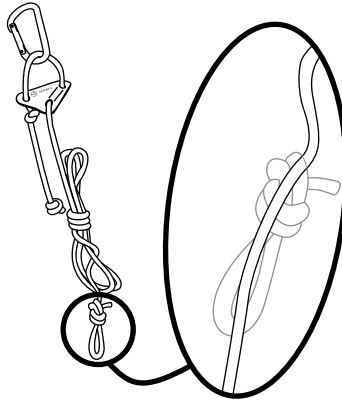


Untie the loop at the end of the guylines.

2

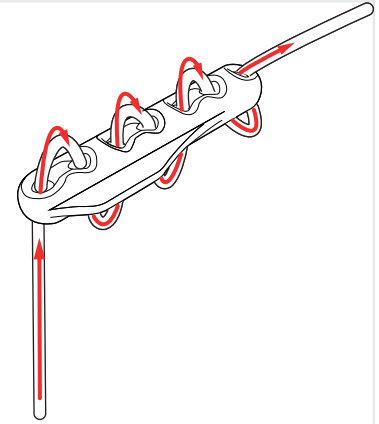


Wave the guylines true the shock absorber like shown.

3

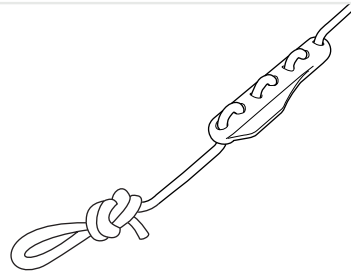

Make the Overhand loop at the end of the rope again.

4

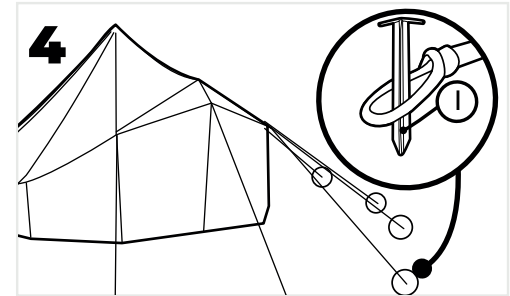

Peg down the guylines.